

# ***Rental Cleaning Procedure***

## **Popcorn Machine**

- 1) Empty all popped and unpopped popcorn out of the cabinet and kettle.
- 2) Empty out the seed drawer.
- 3) Wipe down cabinet, glass, and kettle with a damp rag.
- 4) Make sure to bring the scoop back!

## **Slush Machine**

- 1) Drain all product from the unit.
- 2) Fill reservoir up with warm water (no soap).
- 3) Turn unit to clean mode and let run for 10 minutes.
- 4) Drain and repeat if necessary.

## **Pretzel Machine**

- 1) Empty all left over pretzels and pieces.
- 2) Wipe down cabinet with damp rag.

## **Nacho Cheese Machine**

- 1) Take all leftover cheese out of the machine.
- 2) Wipe down machine with damp rag. Make sure that all spilled cheese is wiped up inside and outside.
- 3) Put all parts back inside dispenser (valves, weight, etc...)

## **Cotton Candy Machine**

- 1) Run machine until no product is left inside the "head".
- 2) Wipe down machine with a damp rag.
- 3) Wash bowl, mesh netting, and clips with water. Let dry.

## **Sno Kone Machine**

- 1) Drain all ice and water out of cabinet.
- 2) Wipe down machine with a damp rag.

***Valley Popcorn Co. 800-554-5767***