



1066 PUSH BUTTON SWITCH
1153DOOR STRAP ONLY
1154DOOR HINGE & STRAP - LEFT
1154-2DOOR HINGE-ONLY - LEFT
1155DOOR HINGE - RIGHT & STRAP
1155-2DOOR HINGE-ONLY - RIGHT
1217RECTANGULAR MAGNETIC CATCH
1254POWER SUPPLY CORD
1292CONCAVE (KNOB) W/ SCREW
1517NAMEPLATE SERIAL NO.
1605RUBBER FOOT W/ HARDWARE
1757GLASS CHANNEL (SOLD PER FOOT)
2167CORD STRAIN RELIEF
2414DECAL - "POPCORN"
2448-AHEAT PAD - 120V
2689CLEAN OUT DRAWER
2817GLASS CHANNEL-SS - 17-7/8
2823DOOR KNOB SCREW
3859GLASS CHANNEL-SS - 20-3/8
3855GLASS CHANNEL-SS -
4938SWITCHPLATE DECAL
5130SWITCH - LIGHTED
5200INDICATOR LIGHT
5829#6 x 1/2" SHEET METAL SCREW
7761#6 x 1/4 SLTD TYPE A-N.P.
780210-24 x 1/4 B.H. W/ NYLOCK
78036-32 X 3/8 PHIL. PAN HEAD
10178BOTTOM COVER - T3000
10179STIFFENER - NOT SHOWN
10180DROP SHELF
10212TOP
10298PLEXIGLASS DOOR
(9-7/16 x 18-9/16 ACRYLIC .187)
10512INSIDE CORNER
10576INSTRUCTION DECAL